

## BMS Program Upgrading

- 1、Double click to run the 'Uptade V1.1' software. (BMS at running state)



- 2、Connect battery pack and computer with USB to RS485 adapter. Choose the right port number. And the baud rate choose 19200.



3、Click '浏览' from the 'dialog box'. And choose the right program. (The program file format is 'ehex'.)

Update V1.1

端口

串口号: COM4 波特率: 19200

校验位: None 数据位: 8

停止位: One 打开

选择程序文件:

选择文件: FW20-NTC3950-200306-1M].ehex 浏览

程序下载

下载

4、Click the following button to open the 'stop bit'. (Button displays '关闭' means that the stop bit is opened. )

Update V1.1

端口

串口号: COM4 波特率: 19200

校验位: None 数据位: 8

停止位: One 关闭


选择程序文件:

选择文件: FW20-NTC3950-200306-1M].ehex 浏览

程序下载

下载

5、Click ‘下载’ to update software. (If an error occurs, click ‘download’ repeatedly for several times and try again.)

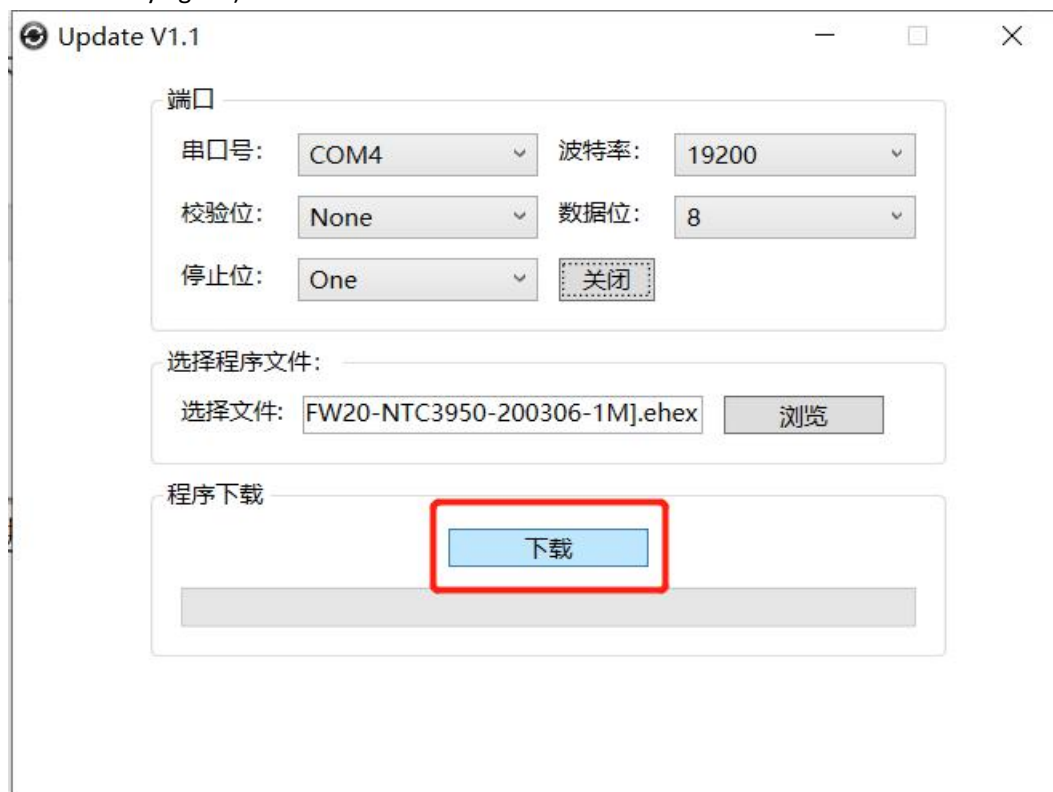

6、When it displays the following status, the program updated successfully.

