



# Firmware Updating - SOC Calibration

1. Download the firmware with the following link.


<https://drive.google.com/drive/folders/10pxgNLHovcDZRVGrCZsSkfecBrRw-AdW?usp=sharing>

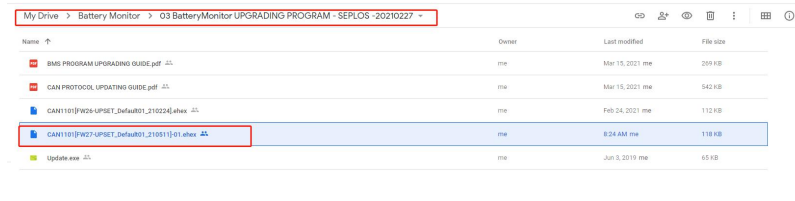


2. Connect the battery pack with computer. And run the 'BatteryMonitor' software.

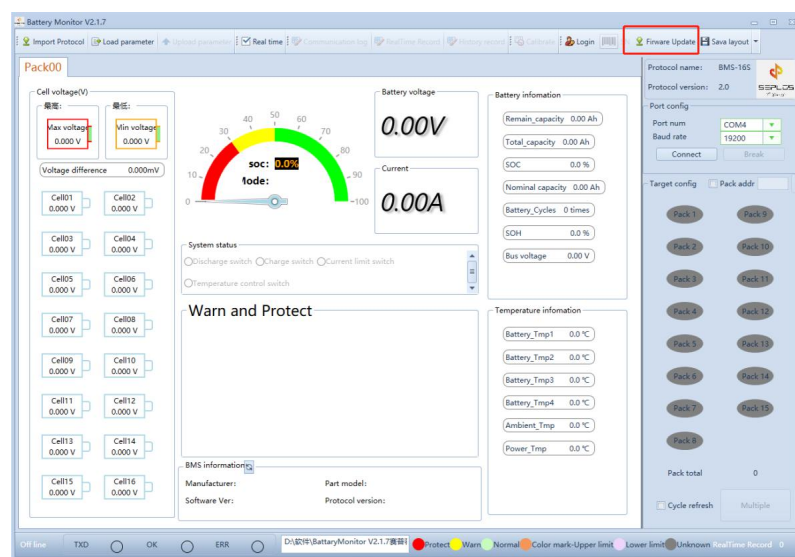

3. Click the 'Firmware Update'. Choose the right Port number, Pack number, and the baudRate is 19200. Parity is None. DataBits is 8. StopBits is One. Then click 'Open'.

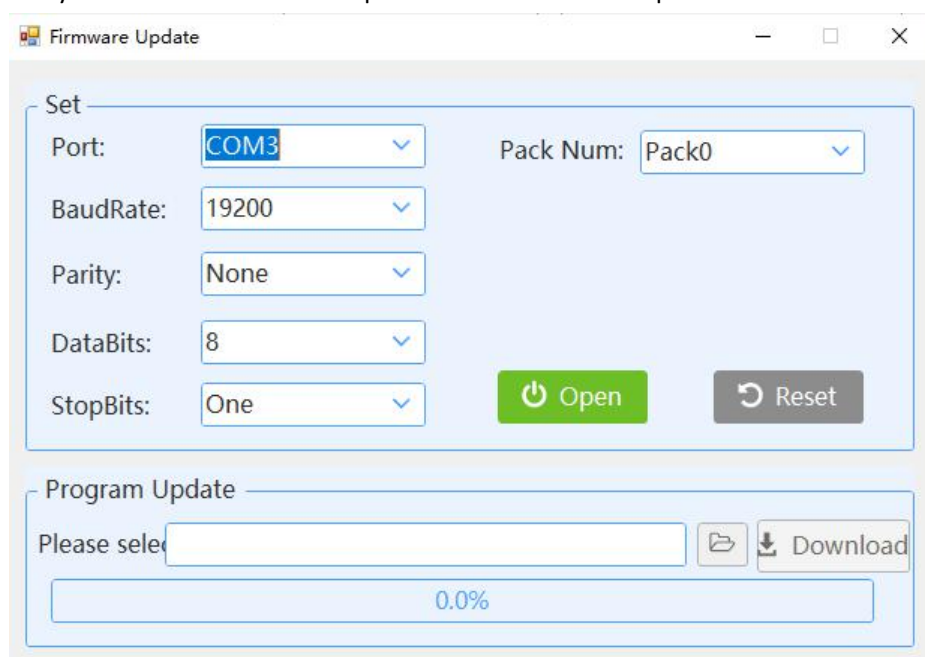

4. Click the file icon. Choose updating firmware. And click 'Download'.

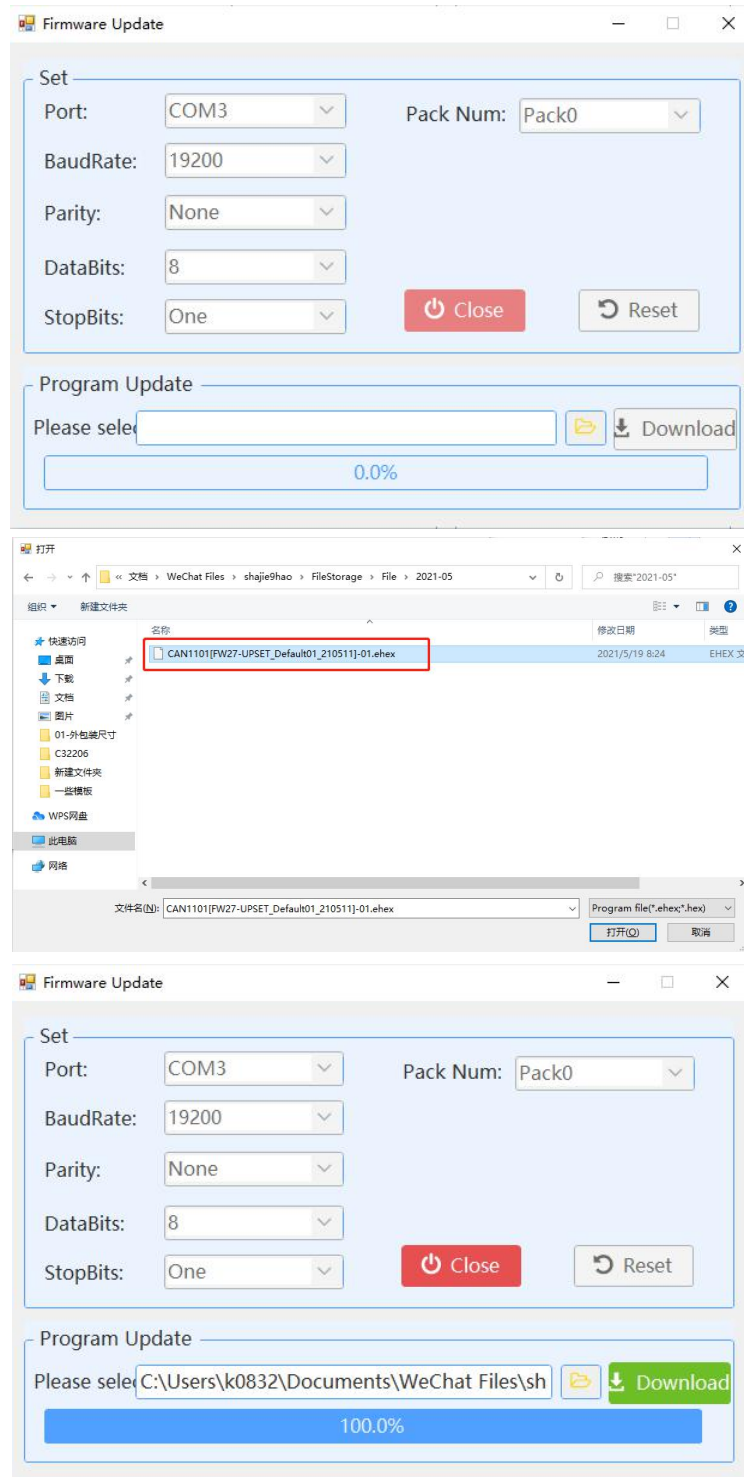

5. Then the firmware will update automatically. After the firmware updated successfully, click 'OK'.

