



1: Where BMS drew the red box in my photo, you short circuit it with the tool.

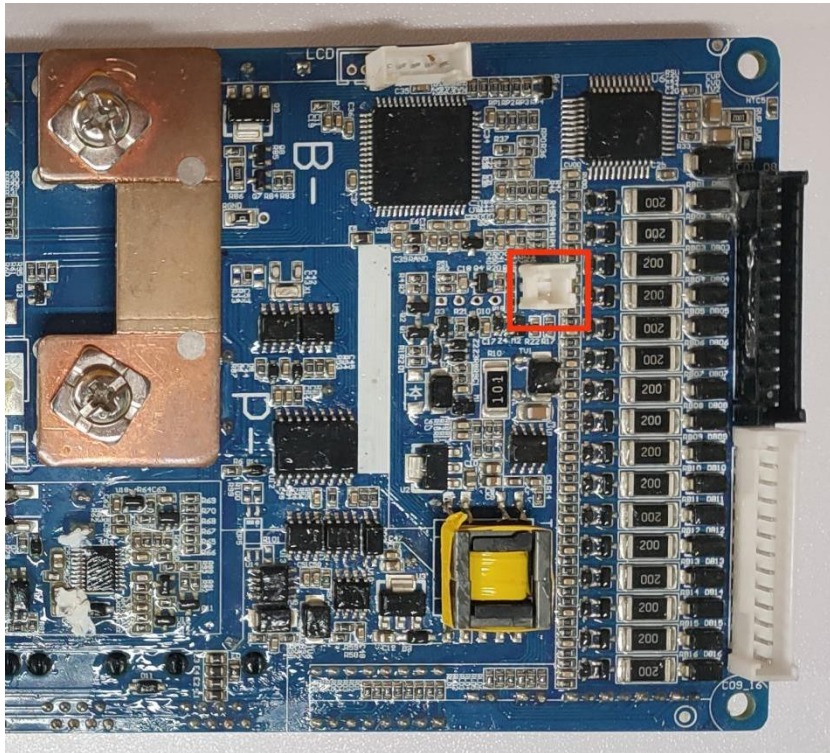

2: Then connect host, open host, First click "Upload parameter"

3: In the red box to find the "switch off function" position, set to "off" state, click on "all settings." .

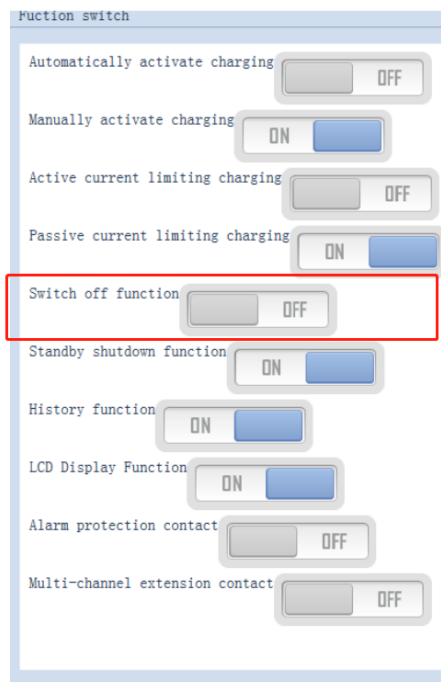

4: Disconnect the shorting position, the modification is completed.

